

How To Install Your New LCD Screen

iPod Nano 2nd Gen (5 Color)



PLEASE PRINT OUT A COPY OF THE MANUAL BEFORE INSTALLATION

For Customer Service and Technical Support
email: support6@fastmac.com or phone: 408.850.6232




Thank you for choosing FastMac. Please feel free to contact us at any time with any questions or comments you may have while installing your new LCD screen for your Nano.



1. Lay out the tools provided in the package (razor blade not included).



2. Press and hold the play/pause button to place the iPod in sleep mode. Locate the hold switch on top of the iPod and turn to the on (orange) position.

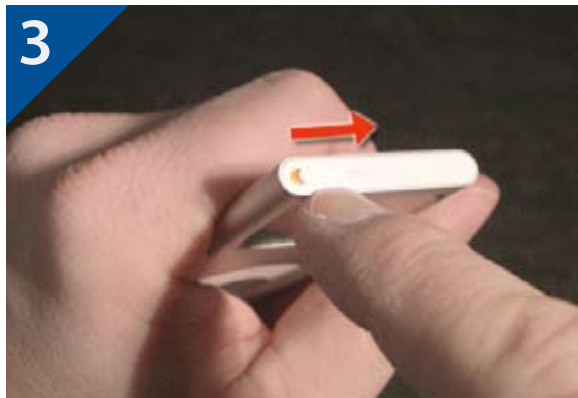

3. Insert a razor blade (not included), carefully insert the tip between the white plastic and the metal casing of the iPod.



4. Slowly lower the blade into the crevice and carefully pry away from you.

Stage 2: Removing the Case



5. You will see the adhesive begin to separate. Slowly work your way around the edges, prying up gently as you go. Use a small flat-head screwdriver to complete the removal process. Set the top cover aside.



6. Turn the iPod over and repeat step 3.



7. Locate the two screws on the top of the iPod. Remove them and set aside.



8. Locate the two screws on the bottom of the iPod. Remove them and set aside.

Stage 3: Removing the Logic Board




9. Very carefully, insert a flat-head screwdriver in the location shown in the picture and work the plug out slowly. BE CAREFUL! This piece will remain attached via a very thin ribbon cable.



10. Locate the small screw inside the chassis. It is well hidden. Remove this screw and set aside..



11. Carefully pry the thin metal bracket up and away. Set aside.

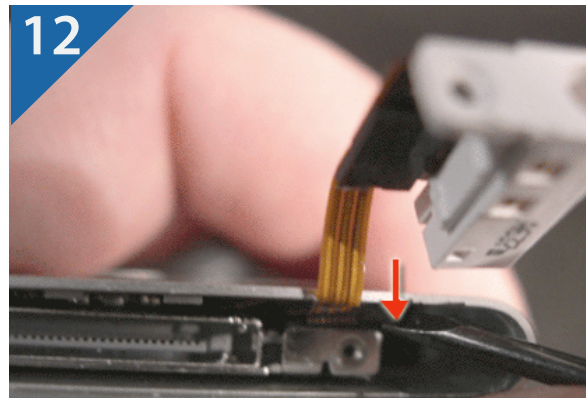

12. Gently insert a flat-head screwdriver as shown in the picture. You will not be able to see the connector, but it is there. Very carefully, lift up the screwdriver to release the connector. This is the trackpad and headphone jack ribbon cable connector.

Stage 4: Removing the Old LCD Screen



13. Taking care not to pull the cable, push the chassis in the direction shown in the picture.




14. This is what both pieces look like when disassembled.



15. Using the nylon tool, carefully pry the old screen away from the battery. Ensure that you do not pull on the clear plastic sheeting behind here when you begin removing the battery.



16. Remove the Kapton tape to the LCD area as shown in the picture. Set this aside for later use.

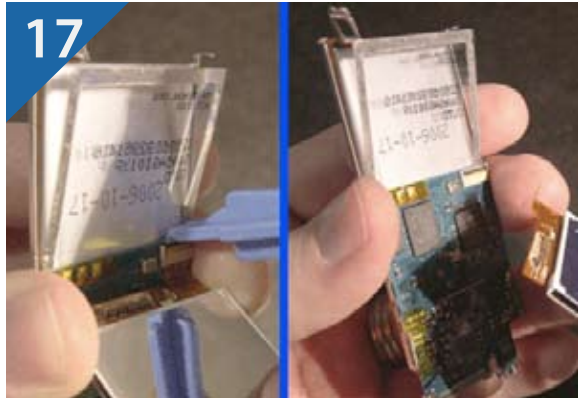

17. Using the nylon tool, carefully pry the lever up to release the ribbon cable of the LCD. Remove the old LCD.



18. Remove the new LCD from the package. Peel off the protective sheeting




19. Insert the new LCD's ribbon cable into the connector. Be gentle, as this cable is very delicate. Lock the lever down using the nylon tool.



20. Gently squeeze the edges of the LCD against the battery to reapply the adhesive. Make sure you don't push in the middle!


Stage 6: Re-attaching iPod

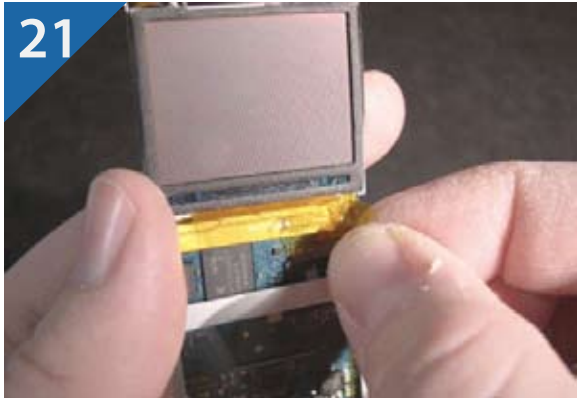


21. Reattach the Kapton tape to the LCD area as shown in the picture.



22. Slide the chassis carefully back into the case. Make sure you clear all cables as you do this.

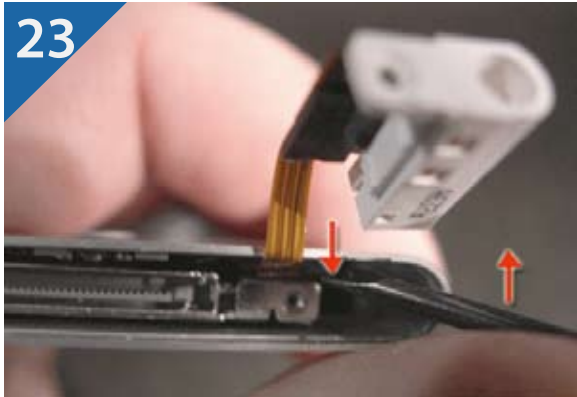


23. Insert the flat head again above the ribbon connector this time and gently push down to connect the trackpad/headphone cable back to the logic board.

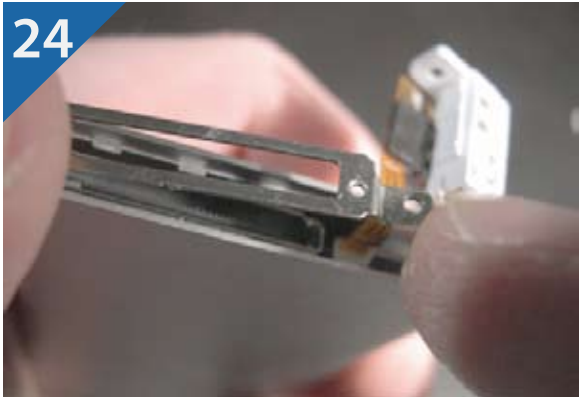

24. Reattach the metal bracket as shown.



25. Locate the small screw hole again inside the chassis. It is well hidden. Reattach this screw.

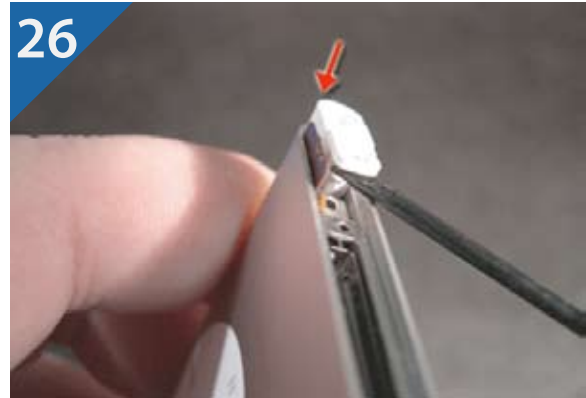

26. Reinsert the headphone jack back into place.



27. Reattach the screws you removed earlier.



28. Reattach the screws on the top of the iPod also. Reattach the white cover. Ensure you line up the hold switch with the cover. Failing to do so could damage your logic board. Take the hold switch off, turn on your iPod by pressing the play button. You're done!

Thank You For Choosing FastMac.

iPod Nano 2nd Gen (5 Color)



Visit FastMac.com For More Products!